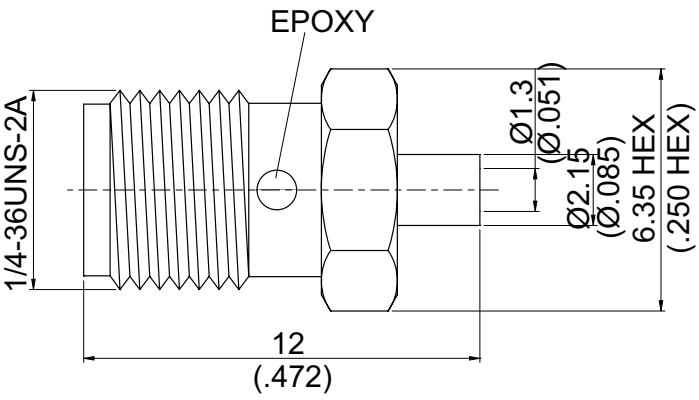


SMA8300-0047	SMA Jack Solder	50Ω												
														
<table border="1"> <thead> <tr> <th>Parts</th><th>Material</th><th>Plating (Micro-inch)</th></tr> </thead> <tbody> <tr> <td>Contact Pin</td><td>Beryllium Copper</td><td>Gold 20 Over Nickel 50 Over Copper 50</td></tr> <tr> <td>Insulator</td><td>Teflon</td><td></td></tr> <tr> <td>Body</td><td>Brass</td><td>Gold 5 Over Nickel 50 Over Copper 50</td></tr> </tbody> </table>	Parts	Material	Plating (Micro-inch)	Contact Pin	Beryllium Copper	Gold 20 Over Nickel 50 Over Copper 50	Insulator	Teflon		Body	Brass	Gold 5 Over Nickel 50 Over Copper 50		
Parts	Material	Plating (Micro-inch)												
Contact Pin	Beryllium Copper	Gold 20 Over Nickel 50 Over Copper 50												
Insulator	Teflon													
Body	Brass	Gold 5 Over Nickel 50 Over Copper 50												
Weight: 1.38 g Suitable Cables: Semi-rigid.047														


This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.


CABLE ASSEMBLY INSTRUCTION

SMA8300-0047

JYE BAO CO., LTD.

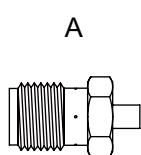


BODY



CONTACT PIN



INSULATOR




INSULATOR

DIAGRAM


ASSEMBLY INSTRUCTION



Step 1: STRIP AS SHOWN.



Step 2: SLIDE CONNECTOR "A" OVER CABLE.
Step 3: SLIDE PREPARED CABLE INTO INSULATOR "C" AND INSULATOR "D".
Step 4: PUT CONTACT PIN "B" ON CENTER CONDUCTOR AND SOLDER IN "Y".

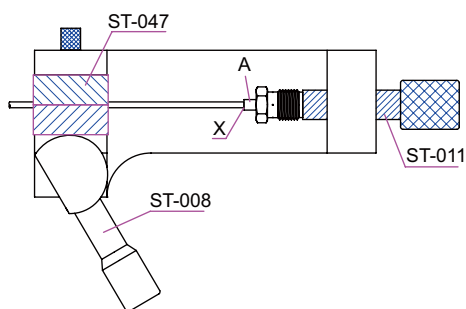

Step 5: INSERT PREPARED CABLE INTO CONNECTOR BODY "A" AND USE SOLDERING FIXTURE "ST-008", INSERT TOOL "ST-047" AND LOCATOR TOOL "ST-011" TO FIX THE CONNECTOR. SOLDER IN "X".

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.