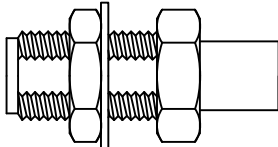

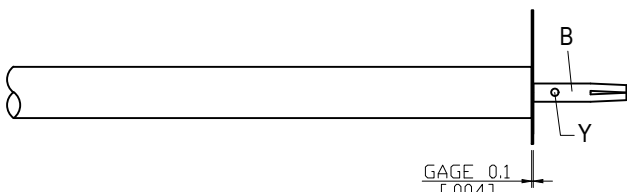
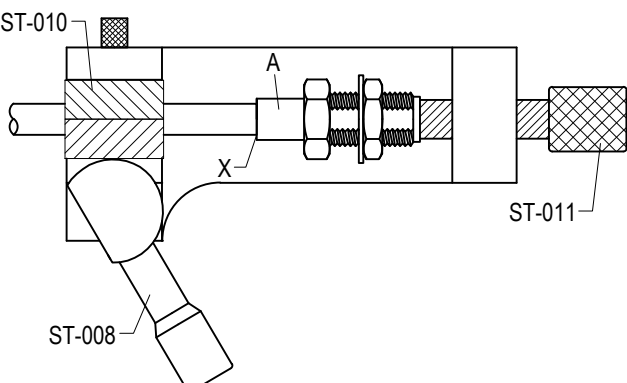
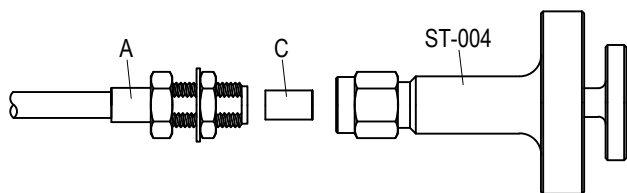


JYE BAO CO., LTD.

CABLE ASSEMBLY INSTRUCTION

SMA8300L-0141		DATE	2017/12/01	REV	—
A		B	C		
					
BODY + HEX NUT + LOCK WASHER		CONTACT PIN	INSULATOR		
DIAGRAM		ASSEMBLY INSTRUCTION			
		Step 1: STRIP AS SHOWN.			
		Step 2: PUT 0.1 MM GAGE ST-0.1 IN PLACE, INSERT CABLE'S CENTER CONDUCTOR INTO CENTER PIN " B " AND SOLDER IN " Y ".			
		Step 3: USE SOLDERING FIXTURE " ST-008 ", INSERT TOOL " ST-010 " AND LOCATOR TOOL " ST-011 " TO FIX THE CONNECTOR. SOLDER IN " X ".			
		Step4: USE DIELECTRIC INSERTION TOOL " ST-004 " TO INSERT THE TEFLON " C ".			
This part number complies with RoHS. Notice: JYEBAO reserves the right to make modifications deemed appropriate.					
APPROVED		CHECKED		DRAWING	
				Albert	