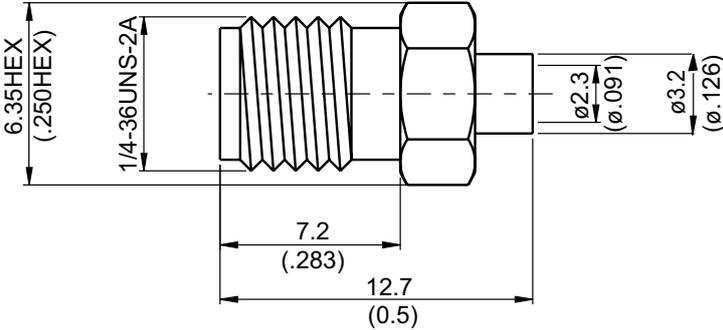


SMA8300-0085	SMA Jack Solder	50Ω												
														
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">Parts</th> <th style="width: 20%;">Material</th> <th style="width: 65%;">Plating (Micro-inch)</th> </tr> </thead> <tbody> <tr> <td>Contact Pin</td> <td>Beryllium Copper</td> <td>Gold 20 Over Nickel 50 Over Copper 50</td> </tr> <tr> <td>Insulator</td> <td>Teflon</td> <td></td> </tr> <tr> <td>Body</td> <td>Brass</td> <td>Gold 5 Over Nickel 50 Over Copper 50</td> </tr> </tbody> </table>			Parts	Material	Plating (Micro-inch)	Contact Pin	Beryllium Copper	Gold 20 Over Nickel 50 Over Copper 50	Insulator	Teflon		Body	Brass	Gold 5 Over Nickel 50 Over Copper 50
Parts	Material	Plating (Micro-inch)												
Contact Pin	Beryllium Copper	Gold 20 Over Nickel 50 Over Copper 50												
Insulator	Teflon													
Body	Brass	Gold 5 Over Nickel 50 Over Copper 50												
Weight: 1.52 g Suitable Cables: Semi-rigid.085														

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

CABLE ASSEMBLY INSTRUCTION

SMA8300-0085

JYE BAO CO., LTD.

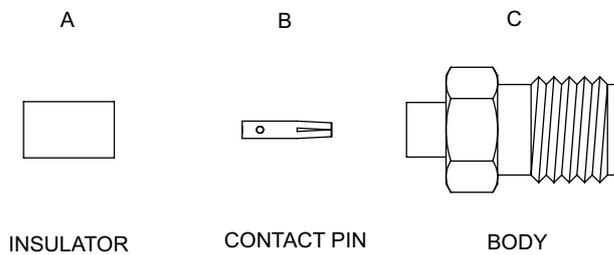


DIAGRAM	ASSEMBLY INSTRUCTION
	<p>Step 1: STRIP AS SHOWN.</p>
	<p>Step 2: INSERT CABLE'S CENTER CONDUCTOR INTO CENTER PIN AND SOLDER IN "Y", USE 0.3 MM GAGE.</p>
	<p>Step3: PUT CABLE INTO SOLDERING FIXTURE "ST-008". AND LOCK IT. PUT CONNECTOR AS SHOWN. Step4: SCREW LOCATOR TOOL "ST-011" TO THE POSITION AS SHOWN IN "S", AND SOLDER IN "X".</p>
	<p>Step5: USE DIELECTRIC INSERTION TOOL "ST-004" TO INSERT THE TEFLON "A".</p>

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.