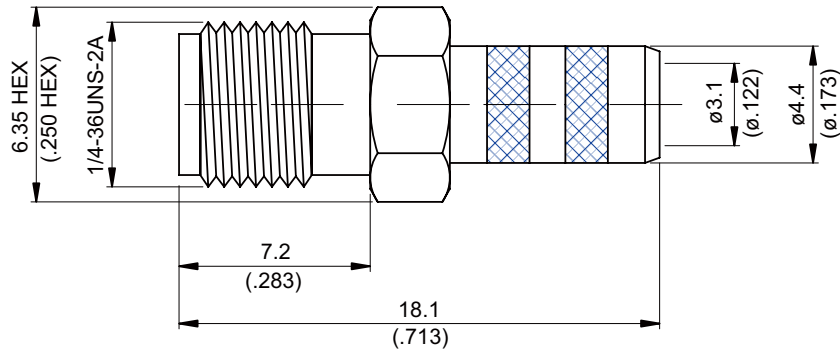


SMA8100-L200	SMA Jack Crimp	50Ω															
<div></div>																	
<table><tr><th>Parts</th><th>Material</th><th>Plating(Micro-inch)</th></tr><tr><td>Ferrule</td><td>Brass</td><td>Gold 5 Over Nickel 50 Over Copper 50</td></tr><tr><td>Contact Pin</td><td>Beryllium Copper</td><td>Gold 20 Over Nickel 50 Over Copper 50</td></tr><tr><td>Insulator</td><td>Teflon</td><td></td></tr><tr><td>Body</td><td>Brass</td><td>Gold 5 Over Nickel 50 Over Copper 50</td></tr></table>			Parts	Material	Plating(Micro-inch)	Ferrule	Brass	Gold 5 Over Nickel 50 Over Copper 50	Contact Pin	Beryllium Copper	Gold 20 Over Nickel 50 Over Copper 50	Insulator	Teflon		Body	Brass	Gold 5 Over Nickel 50 Over Copper 50
Parts	Material	Plating(Micro-inch)															
Ferrule	Brass	Gold 5 Over Nickel 50 Over Copper 50															
Contact Pin	Beryllium Copper	Gold 20 Over Nickel 50 Over Copper 50															
Insulator	Teflon																
Body	Brass	Gold 5 Over Nickel 50 Over Copper 50															
<div>Weight: Suitable Cables: JBY200</div>																	

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.

## CABLE ASSEMBLY INSTRUCTION

SMA8100-L200

JYE BAO CO., LTD.  
TAIPEI TAIWAN R.O.C

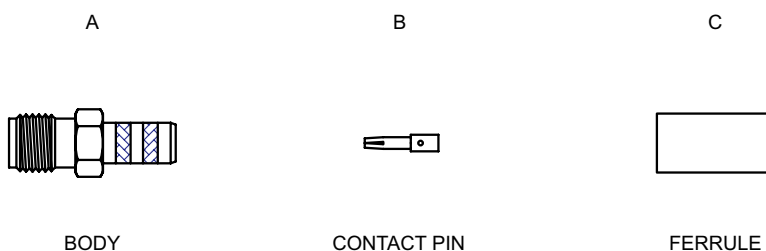


DIAGRAM	ASSEMBLY INSTRUCTION
	<p>Step 1: STRIP AS SHOWN .</p>
	<p>Step 2: SLIDE FERRULE " C " OVER CABLE. Step 3: PUT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y " .</p>
	<p>Step 4: LOOSEN BRAIDING AND SLIDE CONNECTOR " A " IN PLACE.</p>
	<p>Step 5: SLIDE FERRULE " C " TOWARDS THE CONNECTOR " A " AND CRIMP.</p>

This part number complies with RoHS.

Notice: JYEBAO reserves the right to make modifications deemed appropriate.