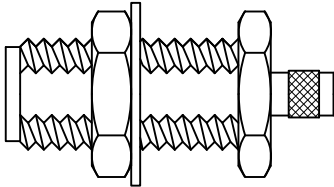

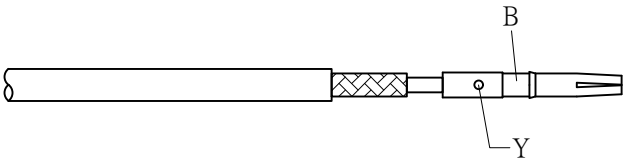
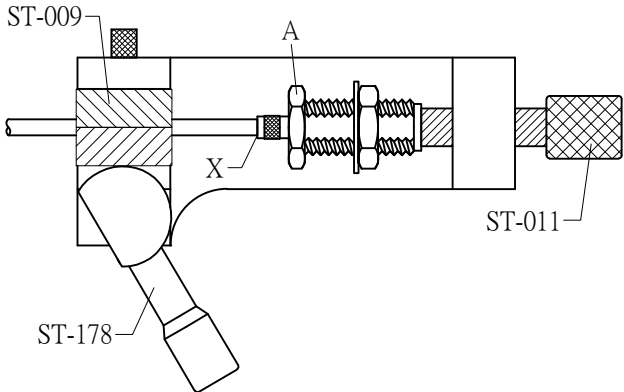


JYE BAO CO., LTD.

TAIPEI TAIWAN

SMA81NDLB-0178	DATE	95.7.10	REV	—
A  BODY B  CONTACT PIN				
DIAGRAM		ASSEMBLY INSTRUCTION		
		Step 1: STRIP AS SHOWN.		
		Step 2: THE BRAID TIN DIP.		
		Step 2: PUT PIN " B " ON CENTER CONDUCTOR AND SOLDER IN " Y ".		
		Step 3: INSERT PREPARED CABLE INTO CONNECTOR BODY " A " AND USE SOLDERING FIXTURE " ST-178 ", INSERT TOOL " ST-009 " AND LOCATOR TOOL " ST-011 " TO FIX THE CONNECTOR. SOLDER IN " X ".		